


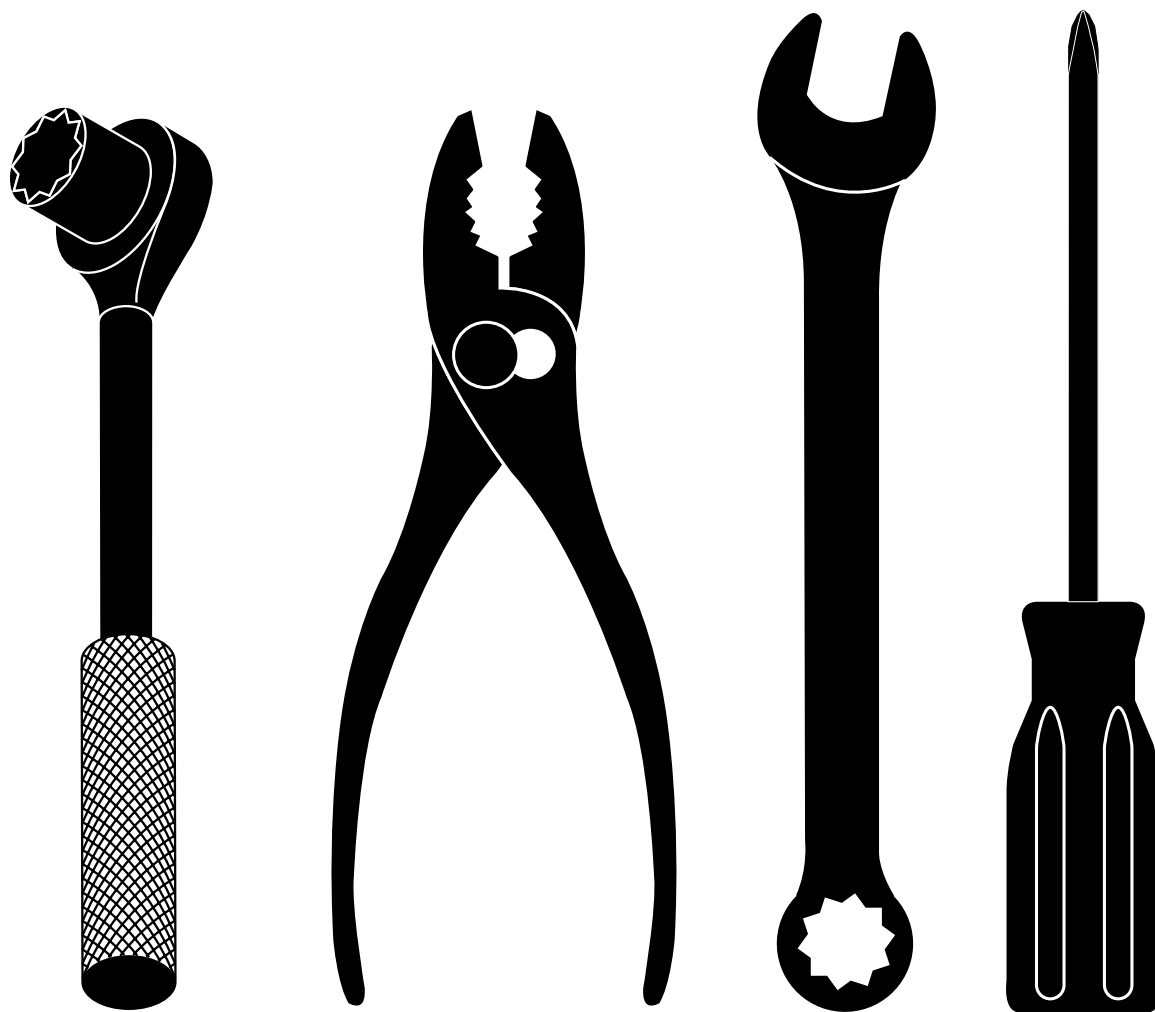

REPAIR PARTS MANUAL

MODEL NO. 15-107R (MBA15107RBA)
Lawn Tractor

Mr. Bricolage

HOW TO USE THIS MANUAL

This manual is designed to provide the customer with a means to identify the parts on his/her tractor when ordering repair parts. The illustrations may or may not represent the actual assemblies; therefore, it is not recommended to use this manual as a guide to assemble or disassemble the tractor. Some hardware and parts are drawn larger in order to more readily identify them.

Each tractor has its own model number.

The model number for your tractor can be found on the fender under the seat.


When ordering parts, always give the following information:

- Product - "Lawn Tractor"
- Model Number - "15-107R" (MBA15107RBA)
- Part Number
- Part Description

TABLE OF CONTENTS


SCHEMATIC.....	3
ELECTRICAL.....	4-5
CHASSIS AND ENCLOSURES.....	6-7
DRIVE	8-9
STEERING ASSEMBLY	10-11
SEAT ASSEMBLY	12
DECALS	13
ENGINE	14-15
LIFT	16-17
MOWER DECK	18-19
BAGGER	20-21

TRACTOR- -MODEL NO. 15-107R (MBA15107RBA), PRODUCT 964 78 22-00
SCHEMATIC

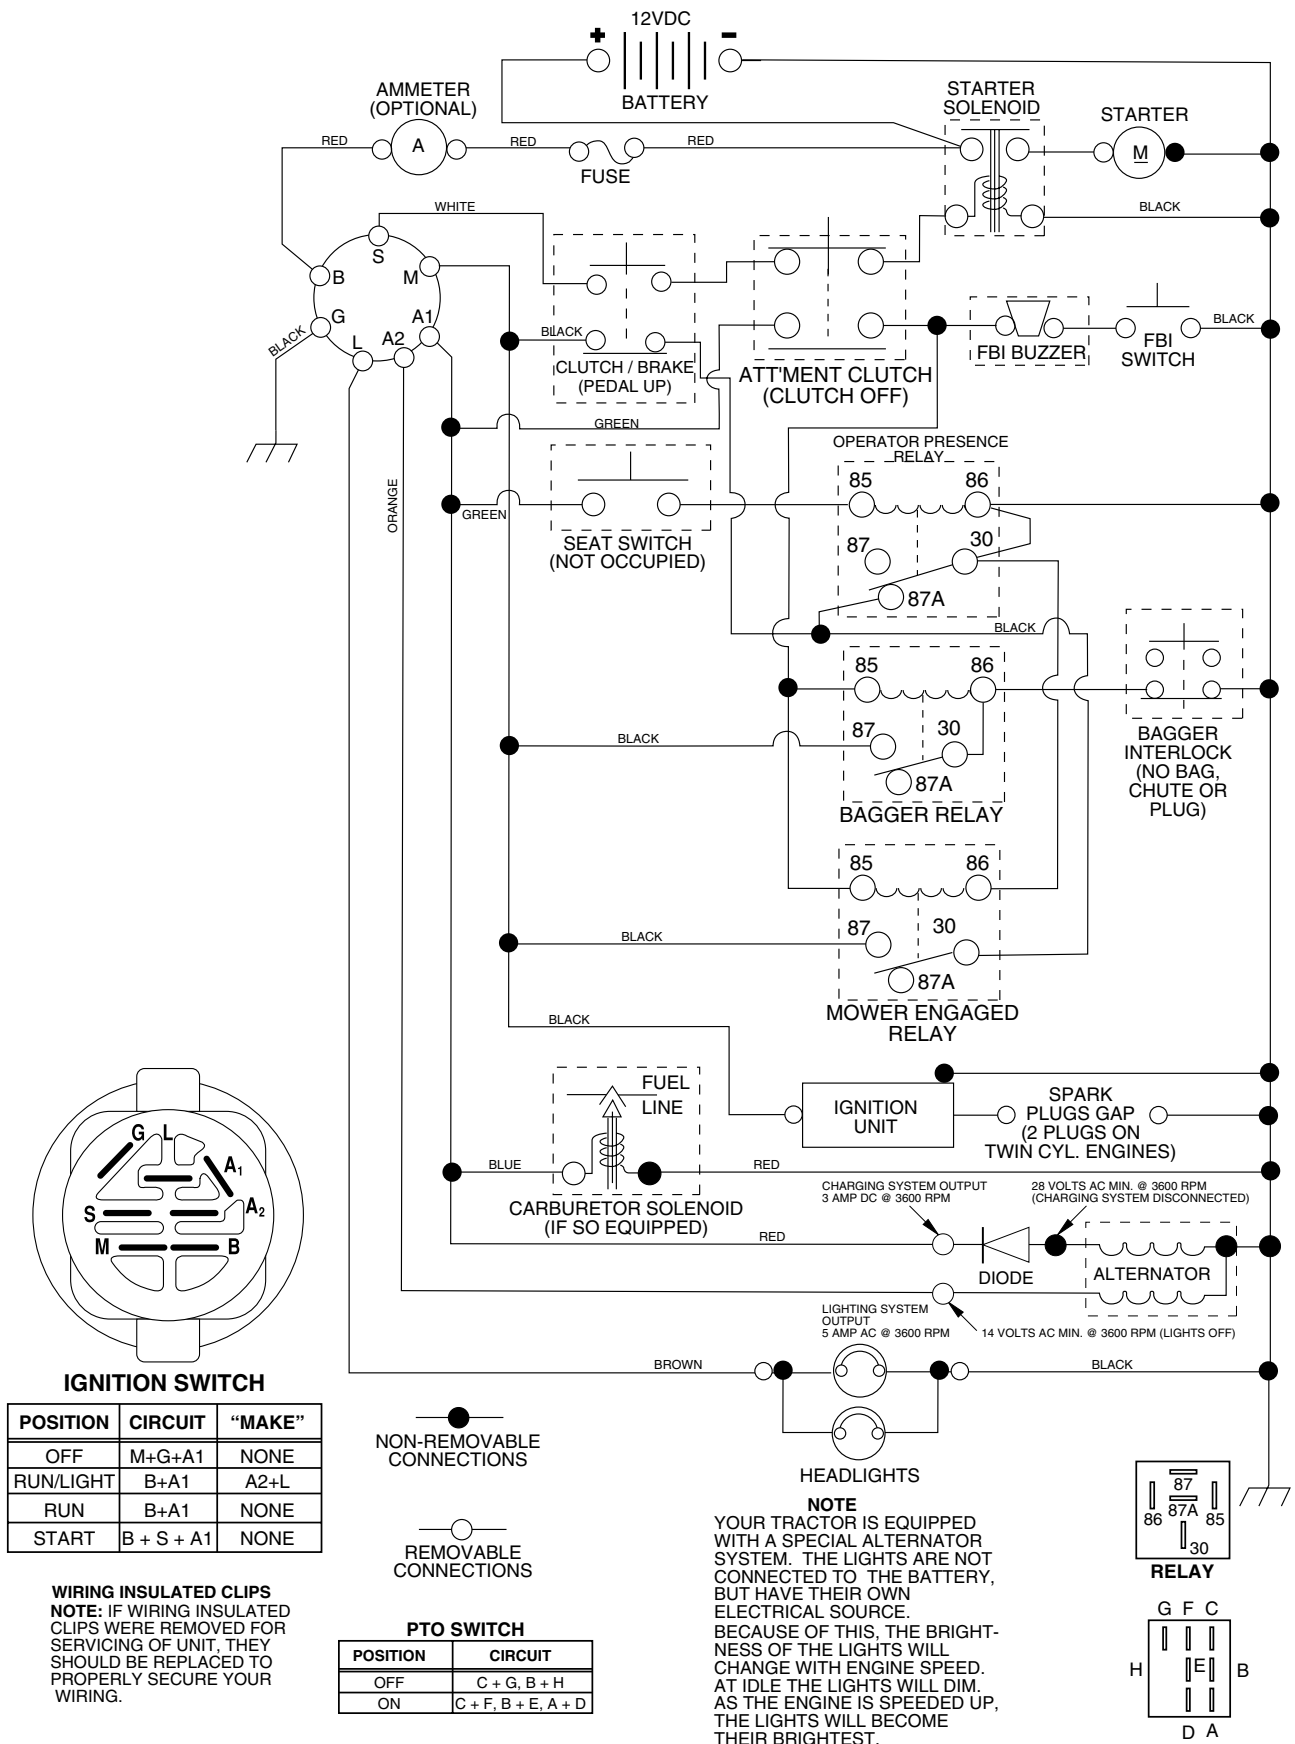

REPAIR PARTS

TRACTOR- -MODEL NO. 15-107R (MBA15107RBA), PRODUCT 964 78 22-00
ELECTRICAL

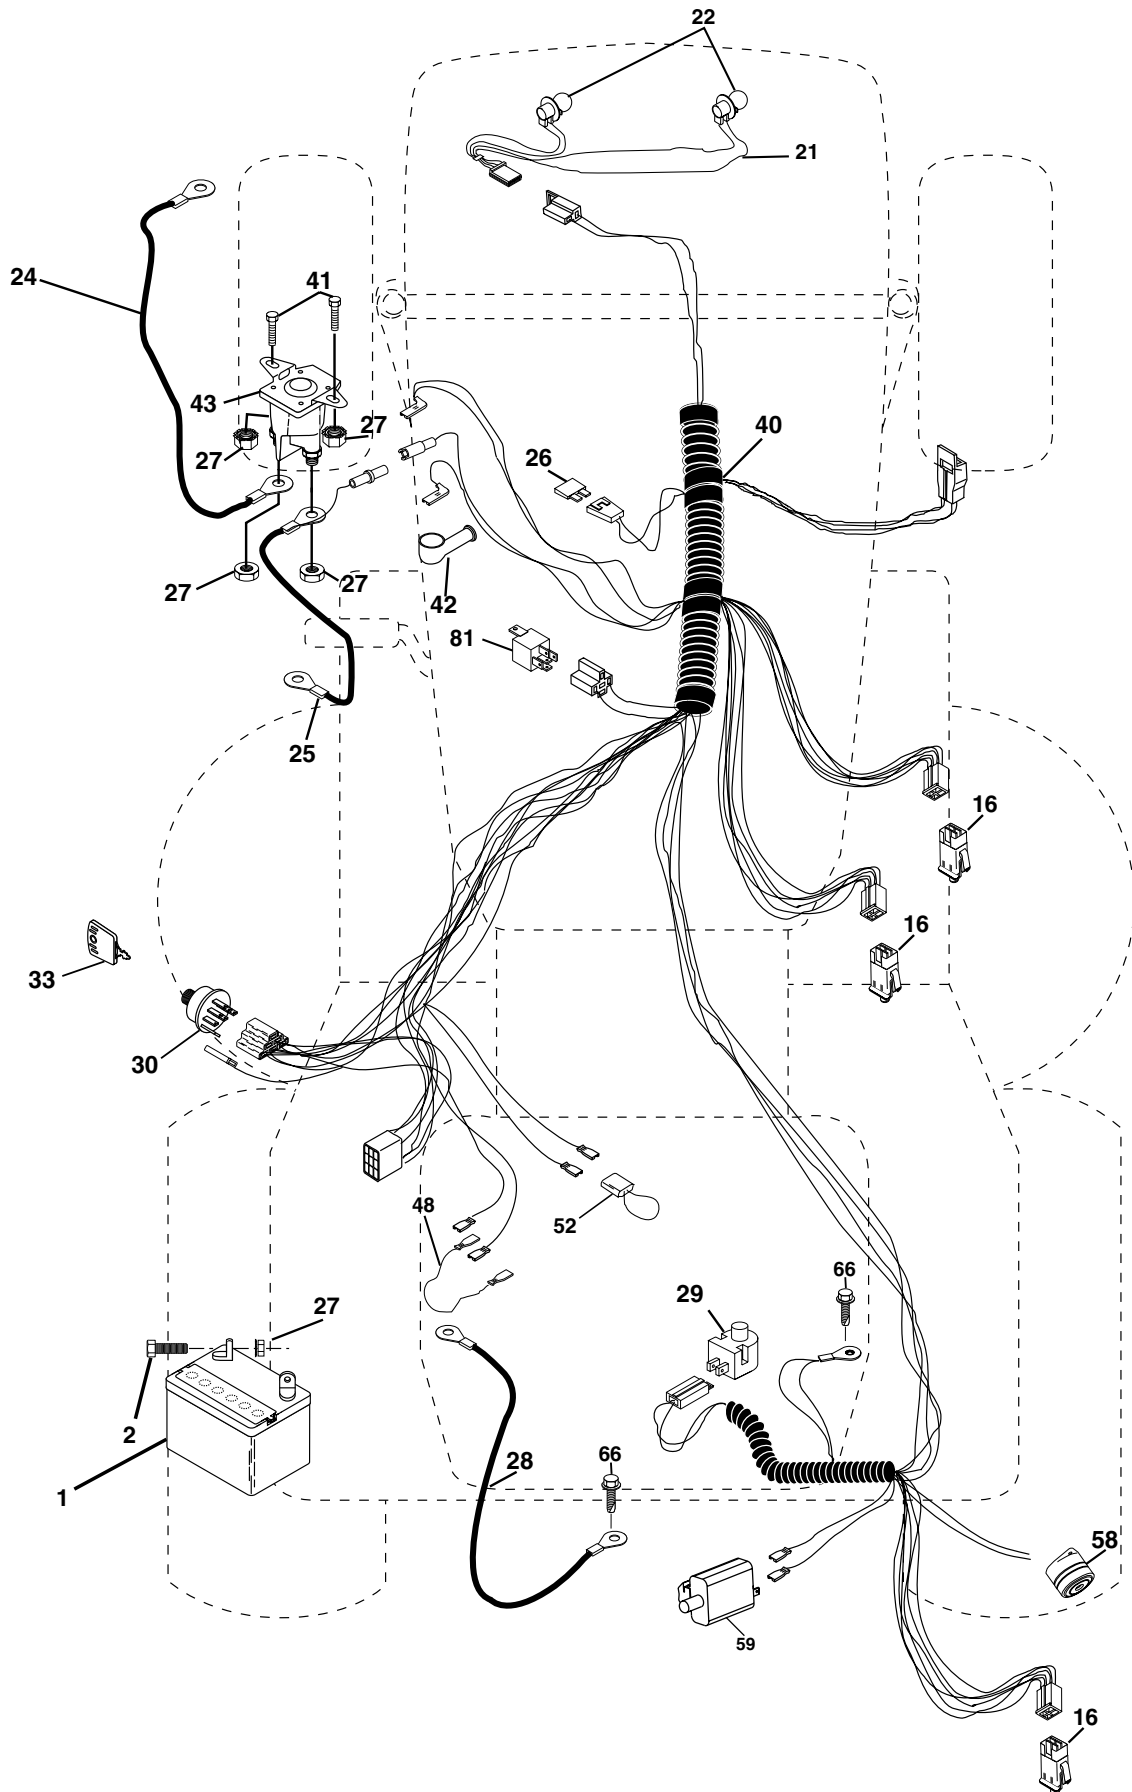

REPAIR PARTS


TRACTOR- -MODEL NO. 15-107R (MBA15107RBA), PRODUCT 964 78 22-00
ELECTRICAL

KEY NO.	PART NO.	DESCRIPTION
1	163465	Battery
2	74760412	Bolt Hex Hd 1/4-20 Unc X 3/4
16	176138	Switch Interlock
21	175688	Harness Asm Light W/4152J
22	4152J	Bulb Light #1156
24	4799J	Cable Battery
25	165987	Cable Battery Crd 56" Red
26	175158	Fuse
27	73510400	Nut Keps Hex 1/4-20 Unc
28	127725X	Cable Ground 6Ga 18" Black
29	160784	Switch Plunger Normal Op Olive
30	175566	Switch Ignition
33	140401	Key Ign Molded
40	179728	Harness Ign Crd Noram
41	71110408	Bolt Flk Fin Hex 1/4-20 Unc X 1/2
42	131563	Cover Terminal Red
43	178861	Solenoid
48	140844	Adapter Ammeter Rectangular
52	141940	Protection Wire Loop
58	169419	Buzzer Crd
59	180379	Switch FBI CRD
66	17490608	Screw Thdrol 3/8-16 x 1/2 Ty-Tt
81	109748X	Relay Asm

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm.

REPAIR PARTS

TRACTOR- -MODEL NO. 15-107R (MBA15107RBA), PRODUCT 964 78 22-00
CHASSIS AND ENCLOSURES

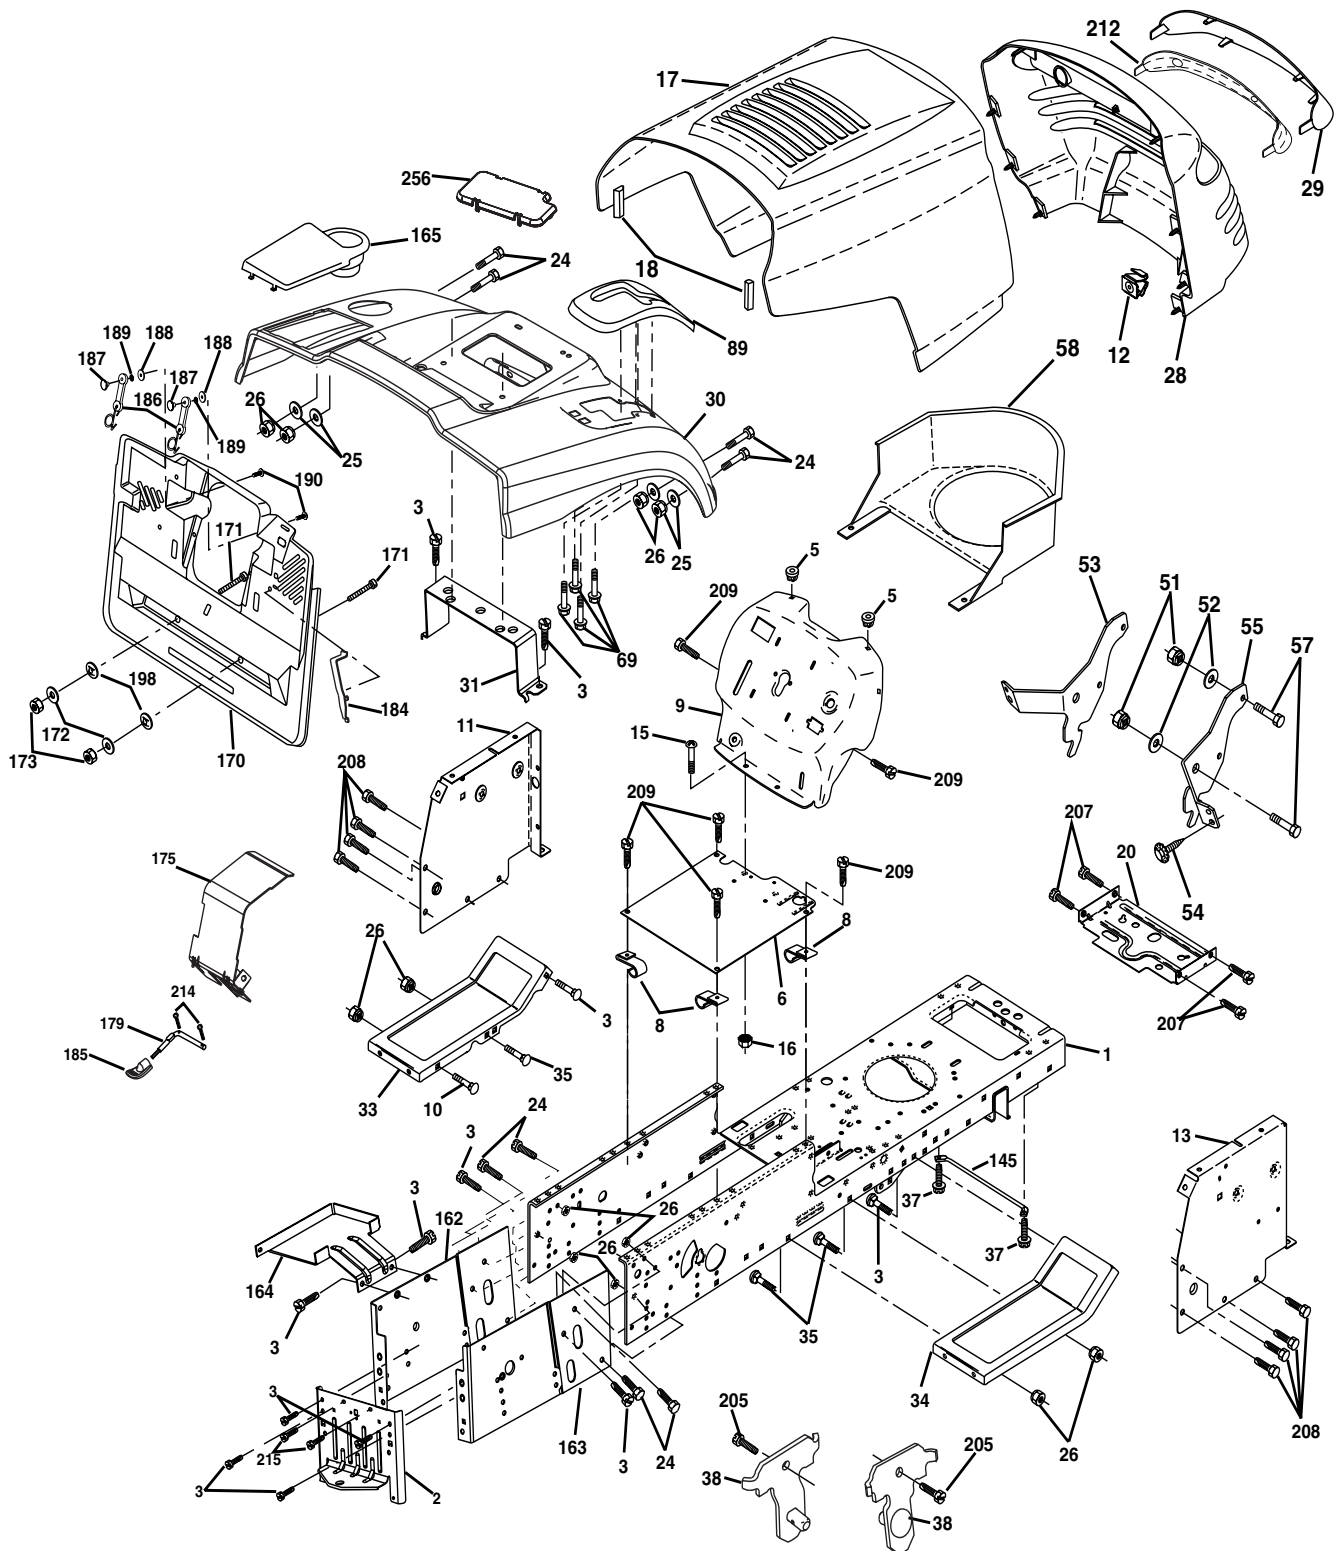

REPAIR PARTS

TRACTOR- -MODEL NO. 15-107R (MBA15107RBA), PRODUCT 964 78 22-00 CHASSIS AND ENCLOSURES


KEY NO.	PART NO.	DESCRIPTION
1	174620	Chassis
2	180384	Drawbar
3	17060612	Screw 3/8-16 x 3/4
5	155272	Bumper Hood/Dash
6	155923	Saddle
8	126471X	Clip Insulator 13/32 Mtg. Hole
9	168347X011	Dash
10	72140608	Bolt, Carriage 3/8-16 x 3/4
11	155927	Panel, Dash, L.H.
12	145660	Clip Tinnerman
13	172107X010	Panel, Asm. Dash R.H.
15	74180512	Screw, Machine, Truss Head 5/16-18 UNC x 3/4
16	73510500	Nut
17	159639X558	Hood
18	126938X	Bumper Hood
20	180679	Plate Mtg Battery/Fuel
24	74780616	Bolt
25	19131312	Washer 13/32 x 13/16 x 12 Gauge
26	73800600	Nut
28	179777	Grille /Lens Asm
29	150209X599	Lens, Grille
30	169962X558	Fender
31	165156	Bracket, Fender Support
33	179716X558	Footrest, L.H.
34	179717X558	Footrest, R.H.
35	72110606	Bolt
37	17490508	Screw Thdrol 5/16-18 x 1/2 TYT
38	175710	Bracket Asm Pivot Mower Rear
51	73800400	Nut Lock w/Fns 1/4-20
52	19091416	Washer 9/32 x 7/8 x 16 Ga.
53	144697	Bracket Grille LH
54	161464	Screw Hex WSHD 8-18 x 7/8
55	144696	Bracket Grille RH
57	74780412	Bolt Fins Hex 1/4-20 x 3/4

KEY NO.	PART NO.	DESCRIPTION
58	150127	Duct Air Engine
69	142432	Screw Hex Wsh
89	177288X428	Console
145	156524	Rod Pivot Chassis/Hood
162	180382	Bracket Exten Chassis Lh CRD
163	180383	Bracket Exten Chassis Rh CRD
164	165605	Support Battery CRD
165	179020X428	Cover Battery
170	178862	Backplate Asm CRD
171	72140620	Bolt Rdhd Sqnk 3/8-16 x 2-1/2 Gr. 5
172	19132016	Washer 13/32 x 1-1/4 x 16 Ga.
173	73510600	Nut, Keps Hex 3/8-16 UNC
175	180310	Guard Trap
179	180376	Rod Pivot FBI CRD
184	174662	Bracket Actuator Bagger CRD
185	179608X505	Knob Rod Brake Parking
186	160793	Latch Asm Mulch/Bagger
187	2029J	Nut Weld
188	19061216	Washer #10
189	10071000	Washer Lock #10
190	71081010	Screw Pan Hd Phillip 10-24 x 5/8
198	168937	Nut, Push
205	17490608	Screw Thdrol 3/8-16 x 1/2
207	17670508	Screw Thdrol 5/16-18 x 1/2
208	17670608	Screw Thdrol 3/8-16 x 1/2
209	17000612	Screw Hex Wsh Thdrol 3/8-16
212	156494	Insert Lens Reflective
214	4497H	Retainer Spring
215	17060508	Screw 5/16-18 x 1/2
256	180810X428	Cover Fender Rack CRD
--	5479J	Plug, Button

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm.

REPAIR PARTS

**TRACTOR- -MODEL NO. 15-107R (MBA15107RBA), PRODUCT 964 78 22-00
DRIVE**

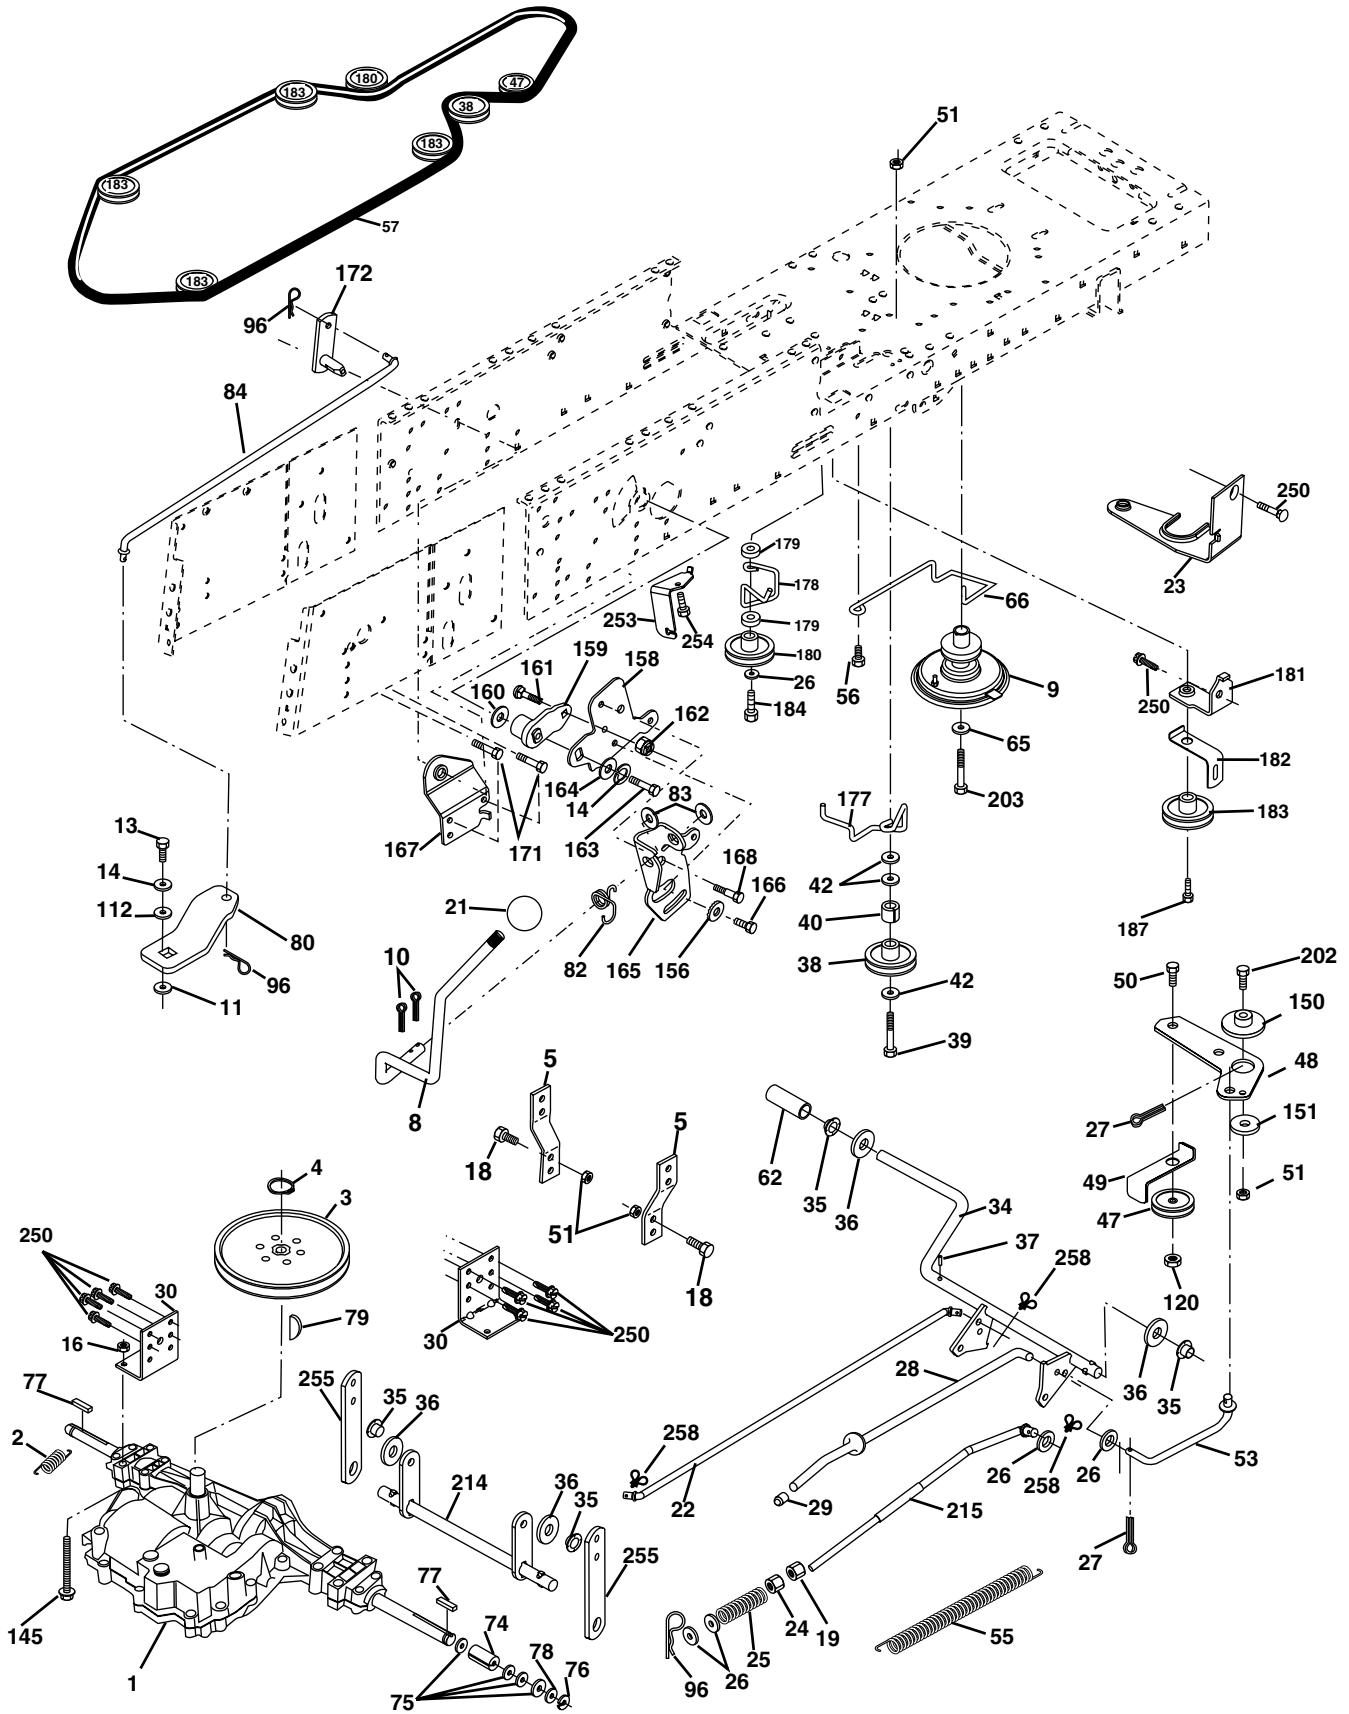

REPAIR PARTS

**TRACTOR- -MODEL NO. 15-107R (MBA15107RBA), PRODUCT 964 78 22-00
DRIVE**

KEY NO.	PART NO.	DESCRIPTION	KEY NO.	PART NO.	DESCRIPTION
1	-----	Transaxle Peerless 206-546 (Order parts from transaxle manufacturer)	75	121749X	Washer 25/32 x 1-1/4 x 16 Ga.
2	146682	Spring Brake Return	76	12000001	Ring, E
3	165999	Pulley Transaxle	77	123583X	Key, Square
4	12000028	Ring Retainer #5100-62	78	121748X	Washer 25/32 x 1-5/8 x 16 Ga.
5	121520X	Strap torque 30 degrees	79	2228M	Key Woodruff
8	165619	Rod Shift Fender Adjust Lt	80	145090	Arm Shift PMST 20" Tires
9	170163	Clutch Asm Noram	82	165711	Spring, Torsion
10	76020416	Pin, Cotter 1/8 x 1	83	19171216	Washer 17/32 x 3/4 x 16 Ga.
11	105701X	Washer Plate Shf .3888 sq hole	84	165621	Link Shift CRD Pmst 18" Tires
13	74550412	Bolt 1/4-28 Unf Gr 8 w/patch	96	4497H	Spring, Retainer 1"
14	10040400	Washer, Lock Hvy Helical	112	19091210	Washer 9/32 x 3/4 x 10 Ga.
16	73800500	Nut, Lock Hex w/Ins 5/16-18 UNC	120	73900600	Nut Lock Flg. 3/8-16 UNC
18	74780616	Bolt Hex 3/8-16 UNC x 1 Gr.5	145	74490540	Bolt Hex FGHD 5/16-18 x Gr 5
19	73800600	Nut, Lock Hex w/Wsh 3/8-16 UNC	150	165850	Bushing, Bellcrank Grnd Dr
20	72110612	Bolt Carr 3/8 - 16 x 1 1/2	151	19133210	Washer 13/32 x 2 x 10 Ga.
21	106933X	Knob Rd 1/2-13 Plstc Thds Blk	156	166002	Washer Srrd 5/16 ID x 1.125
22	175607	Rod, Brake CRD	158	165589	Bracket Shift Mount
23	180302	Bracket Pnt Clutch Noram	159	165494	Hub Tapered Flange Shift Lt
24	73350600	Nut	160	19292016	Washer 29/32 x 1-1/4 x 16 Ga.
25	106888X	Spring, Rod, Brake	161	72140406	Bolt Rdhd Sqnk 1/4-20 x 3/4 Gr 5
26	19131316	Washer 13/32 x 13/16 x 16 Ga.	162	73680400	Nut Crownlock 1/4-20 Unc
27	76020412	Pin, Cotter 1/8 x 3/4	163	74780416	Bolt Hex Fin 1/4-20 Unc x 1 Gr 5
28	175765	Rod, Parking Brake	164	19091010	Washer 5/8 x .281 x 10 Ga.
29	71673	Cap, Parking Brake	165	165623	Bracket Pivot Lever
30	174973	Bracket, Mfg. Transaxle	166	166880	Screw 5/16-18 x 5/8
34	175578	Shaft, Asm Pedal Foot	167	165588	Bracket Support Shift CRD
35	120183X	Bearing, Nylon	168	165492	Bolt Shoulder 5/16-18 x .561
36	19211616	Washer 21/32 x 1 x 16 Ga.	171	17490608	Screw Thdrol 3/8-16 x 1/2 Ty-Tt
37	1572H	Pin, Roll 3/16 x 1"	172	165635	Shaft Asm Shift Front CRD PMST
38	165936	Pulley, Flat	177	165932	Keeper Flat Idler 3.06" CRD
39	74760644	Bolt Fin Hex 3/8-16 Unc x 2-3/4	178	165933	Keeper Belt Idler 1.88" CRD
40	4470J	Spacer, Split 395 x 59 Bzp	179	120958X	Washer Sintered
42	19131312	Washer 13/32 x 13/16 x 12 Ga.	180	165630	Pulley Flat Idler
47	127783	Pulley, Idler, V Groove Plasitc	181	180211	Bracket Idler Ground Drive CRD
48	154407	Bellcrank Clutch Grnd Drv	182	165634	Keeper Belt 2.5" Od V-Idler CRD
49	123205X	Retainer, Belt Style Spring	183	179050	Pulley V-Idler
50	74760624	Bolt Hex Hd 3/8-16 UNC x 1-1/2	184	17490644	Screw Hexwsh Thdrol 3/8-16 x 2-3/4
51	73680600	Nut, Crownlock 3/8-16 UNC	187	17580520	Screw thdrol 5/16-18 x 1 1/4
53	105710X	Link, Clutch 7.66	202	72110612	Bolt Carr sh 3/8-16 x 1 1/2 Gr. 5
55	105709X	Spring, Return, Clutch	203	71170780	Bolt Hex 7/16-20 x 5
56	17060620	Screw 3/8-16 x 1-1/4	214	175609	Shaft Asm Blade
57	165631	V-Belt Kev PMST CRD	215	175651	Rod Brake Secondary
62	8883R	Cover, Pedal	250	17060612	Screw 3/8-16 x .75
65	10040700	Washer	253	175028	Bracket Cable Chassis
66	154778	Keeper, Belt Engine F-Proof	254	17060616	Screw 3/8-16 x 1
74	137057	Spacer Axle	255	175608	Brace Shaft Brake Mtg.
			258	178062	Clip Retainer

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

TRACTOR- -MODEL NO. 15-107R (MBA15107RBA), PRODUCT 964 78 22-00
STEERING ASSEMBLY



REPAIR PARTS


TRACTOR- -MODEL NO. 15-107R (MBA15107RBA), PRODUCT 964 78 22-00 STEERING ASSEMBLY

KEY NO.	PART NO.	DESCRIPTION
1	139768	Steering Wheel
2	172393	Axle Asm Cast Iron Lt
3	169840	Spindle Assembly, L.H.
4	169839	Spindle Assembly, R.H.
5	6266H	Washer, Thrust .75 x 1.230
6	121748X	Washer 25/32 x 1-5/8 x 16 Gauge
8	12000029	Ring, Klip
10	175121	Link, Drag
11	10040600	Washer, Lock
13	136518	Spacer Brg Axle Front
15	145212	Nut, Hex Flange Lock
17	177876	Shaft Assembly, Steering
29	17060612	Screw 3/8-16 x 3/4
32	170162	Rod, Tie
33	19111216	Washer 11/32 x 3/4 x 16 Ga.
34	10040500	Washer Lock Hvy Hlcl Spr 5/16
35	73540500	Crownlock Nut 5/16-24 Unf
36	155099	Bushing, Steering
37	152927	Screw TT #10-32 x 5 x 3/8 Flange
38	140175	Cap Wheel Steering
39	19133812	Washer 13/32 x 2-3/8 x 12 G
40	7810H	Nut Lock Center 3/8-24 Unf
41	100711L	Adaptor, Steering Wheel
42	145054X428	Boot, Steering Dash P/L Mtl
43	121749X	Washer 25/32 x 1-1/4 x 16 Gauge
44	153720	Extension Steering
46	121232X	Cap, Spindle
51	73800500	Nut Lock Hex w/Ins 5/16-18 UNC
54	74780520	Bolt Fin Hex 5/16-18 UNC x 1-1/4
63	74780616	Bolt Fin Hex 3/8-16 UNC x 1. Gr 5
65	160367	Spacer Brace Axle
67	72140618	Bolt Rdhd Sq 3/8-16 x 2-1/4
68	169827	Brace Axle
71	175146	Steering Asm.
82	169835	Bracket Susp Chassis Front 15"
87	173966	Washer Flat .781 x 1-1/2 x .14
88	175118	Bolt Shoulder 7/16-20 UNC
91	175553	Clip Steering

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm.

REPAIR PARTS

TRACTOR- -MODEL NO. 15-107R (MBA15107RBA), PRODUCT 964 78 22-00
SEAT ASSEMBLY

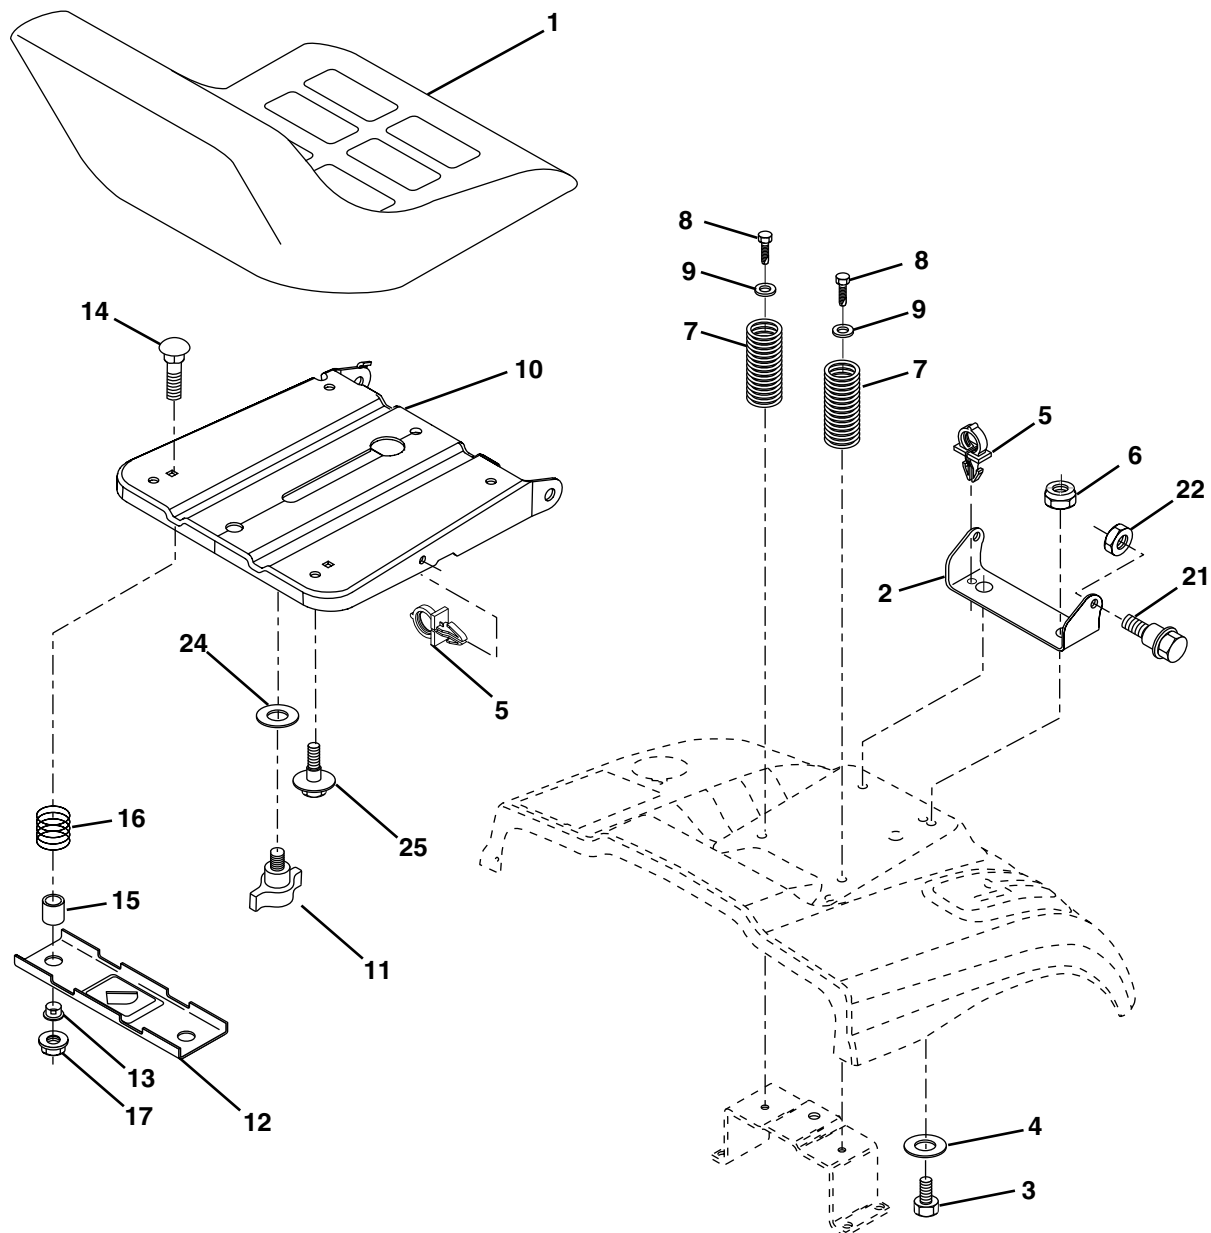


KEY NO.	PART NO.	DESCRIPTION
1	175390	Seat
2	140551	Bracket Pnt Pivot Seat (blk)
3	71110616	Bolt Fin Hex 3/8-16 UNC x 1
4	19131610	Washer Flat 13/32 x 1 x 10 Ga
5	145006	Clip Push In Hinged
6	73800600	Nut Lock Hex w/Ins 3/8-16 UNC
7	124181X	Spring Seat Cprsn 2 250 Blk Zi
8	17000616	Screw 3/8-16 X 1-1/2
9	19131614	Washer 13/32 X 1 X 14 Ga
10	174894	Pan Assembly Seat Tool-Free
11	166369	Knob Seat Adj. Wingnut
12	121246X	Bracket Pnt Mounting Switch

KEY NO.	PART NO.	DESCRIPTION
13	121248X	Bushing Snap Blk Nyl 50 Id
14	72050412	Bolt Rdhd Sht Nk 1/4-20x1-1/2
15	121249X	Spacer Split
16	123740X	Spring Cprsn Plate SW 1.310 Ga
17	123976X	Nut Lock 1/4 Lge Flg Gr 5 Zinc
21	171852	Bolt Shoulder 5/16-18 Unc-2A
22	73800500	Nut Hex Lock w/Ins 5/16-18
24	19171912	Washer 17/32 X 1-3/16 X 12 Ga.
25	127018X	Bolt Shoulder 5/16-18 X 62

NOTE: All component dimensions given in U.S. inches.
1 inch = 25.4 mm

REPAIR PARTS


TRACTOR- -MODEL NO. 15-107R (MBA15107RBA), PRODUCT 964 78 22-00
DECALS

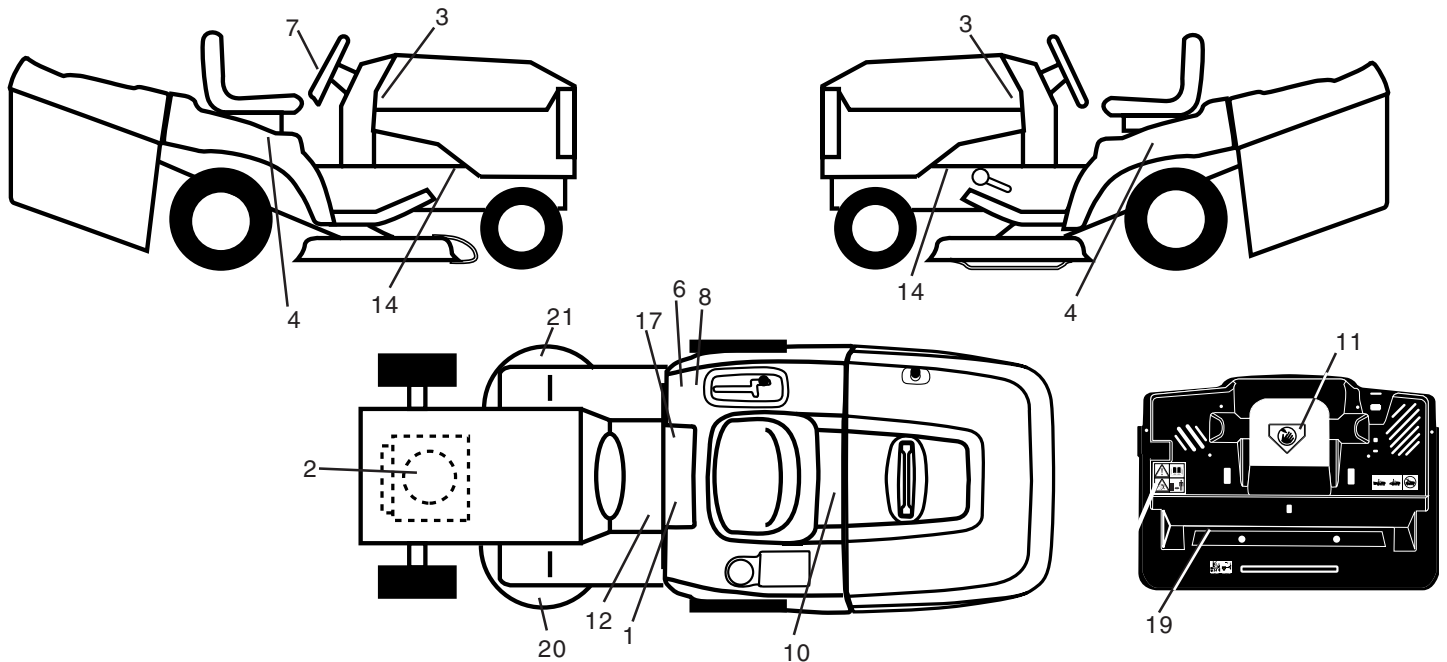

KEY NO.	PART NO.	DESCRIPTION
1	145498	Decal Read Owner's Manual Sym
2	180972	Decal Hp Engine
3	171668	Decal Hood
4	175801	Decal Fender
6	126187X	Decal 100 DBA
7	167970	Decal Ins Strg Whl
8	145437	Decal Europe Stand Ce
10	145005	Decal Bat Dan/Poi P/L Sym Wpn
11	145494	Decal Mower Cut Finger Symbol
12	159737	Decal Brake/Clutch Symbol Lt
14	159736	Decal Chassis Hot Muffler

KEY NO.	PART NO.	DESCRIPTION
17	140837	Decal Saddle Brake Parking
19	180435	Decal Backplate CRD Symbols
20	134999	Decal Enviro Deck
21	166286	Decal Deck Sch
—	138311	Decal Lift Handle
—	179769X428	Pad Footrest R.H.
—	179768X428	Pad Footrest L.H.
—	181051	Manual Operator's (Euro)
—	181052	Manual Parts

WHEELS & TIRES

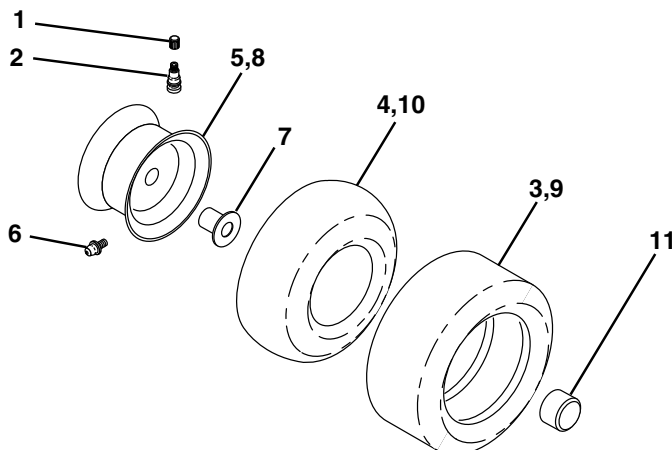


KEY NO.	PART NO.	DESCRIPTION
1	59192	Cap Value Tire
2	65139	Stem Valve
3	106222X	Tire F Ts 15 X 6 0 - 6 Service
4	59904	Tube InnerFront #35060
5	106732X427	Rim Asm 6"front Service
6	278H	Fitting Grease
7	9040H	Bearing Flange
8	106108X427	Rim Asm 8"rear Service
9	124635X	Tire R Ts 18 x 8.5-8 Service
10	7152J	Tube Rear 9 5 X 8 Service
11	104757X428	Cap Axle Blk 1 50 X 1 00
--	144334	Sealant, Tire (10 oz. tube)

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR- -MODEL NO. 15-107R (MBA15107RBA), PRODUCT 964 78 22-00
ENGINE

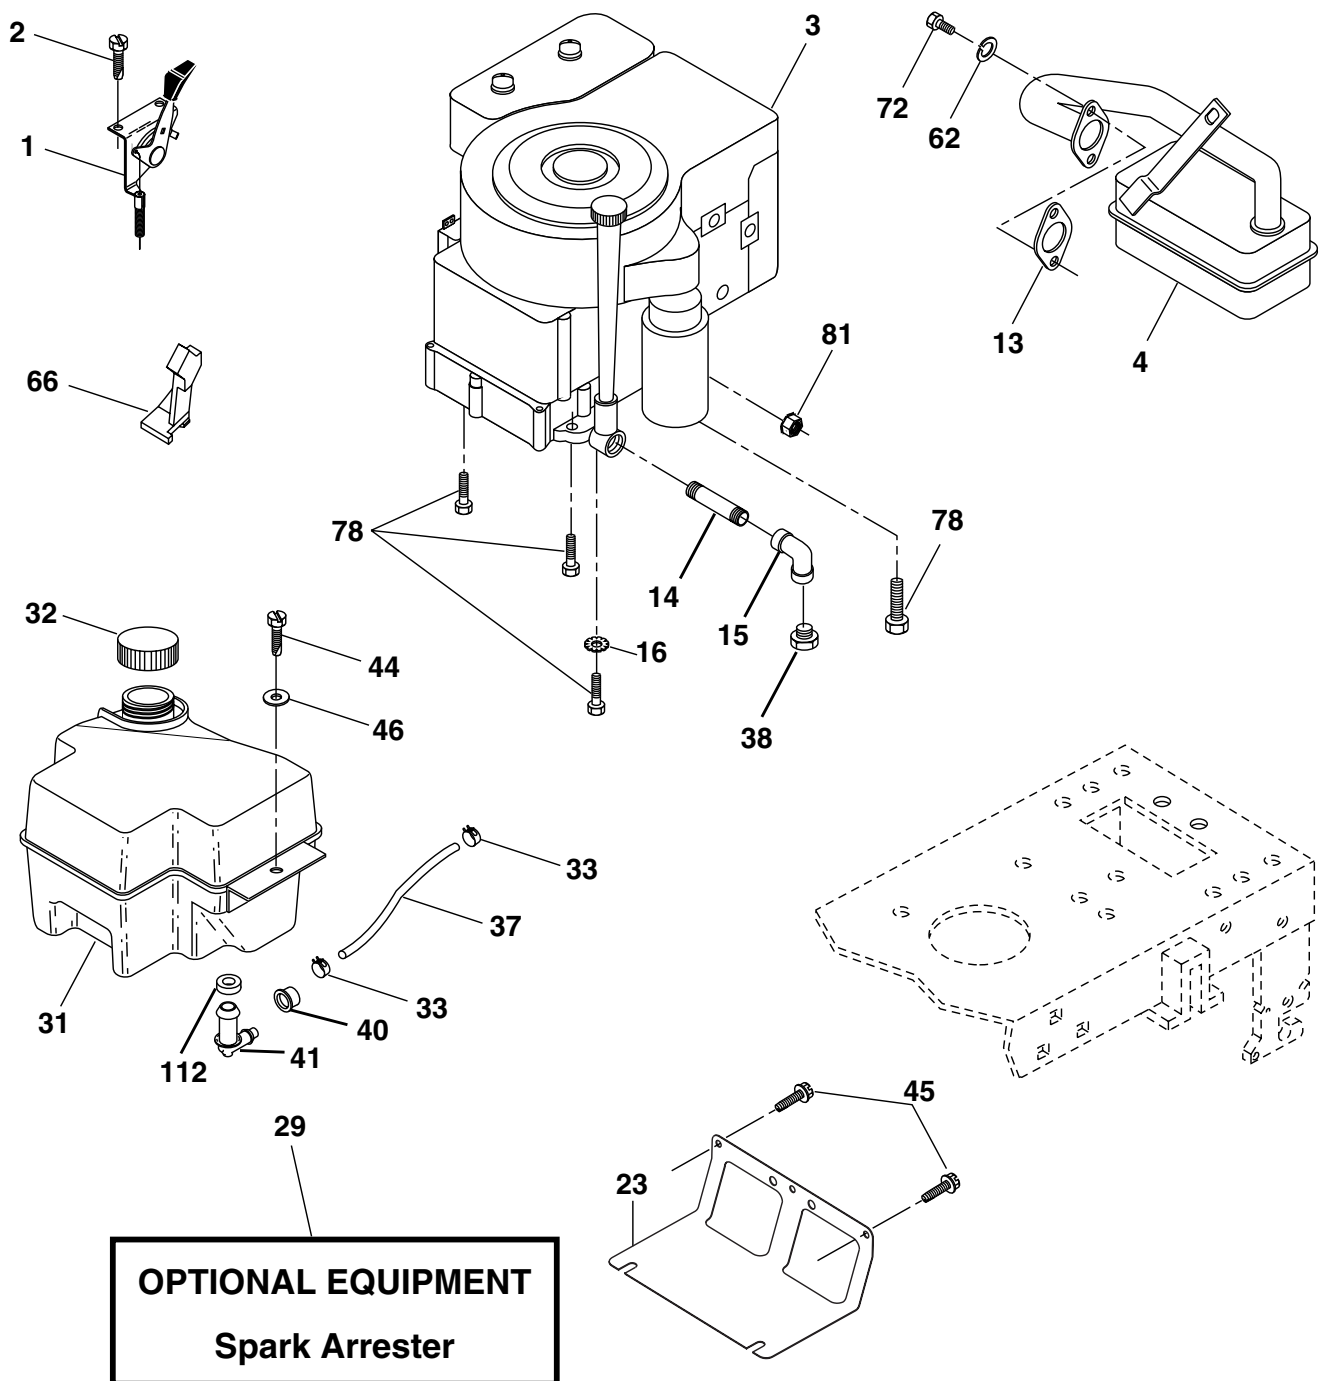

REPAIR PARTS


TRACTOR- -MODEL NO. 15-107R (MBA15107RBA), PRODUCT 964 78 22-00
ENGINE

KEY NO.	PART NO.	DESCRIPTION
1	170865	Control Throt/Ch
2	17720408	Screw Hex Thd Cut 1/4-20 x 1/2
3	-----	Engine Briggs Model 28U707 (Order Parts from Engine Manufacturer)
4	137352	Muffler
13	165291	Gasket 1 313 Id Tin Plated
14	13280324	Nipple Pipe
15	13200300	Elbow
16	11050600	Washer Lock Ext Tooth 3/8
23	169837	Shield Browning/Debris Guard
29	137180	Arrestor Spark
31	180645	Tank Fuel
32	140527	Cap Asm Fule Top Vent N/Lany
33	123487X	Clamp Hose Blk
37	137040	Line Fuel 20"
38	-----	Oil Drain Plug (Order from Enigne Manufacturer)
40	124028X	Bushing Snap
41	139277	Stem Tank Fuel
44	17670412	Screw Hexwsh Thdrol 1/4-20x3/4
45	17000612	Screw Hexwsh Thdrol 3/8-16 x 3/4
46	19091416	Washer 9/32 X 7/8 X 16ga
62	10040500	Washer Lock Hvy Hlcl Spr 5/16
66	127951	Stop Throttle
72	71070512	Screw Hex Hd Cap 5/16-18 x 3/4
78	17060620	Screw 3/8-16x1-1/4
81	73510400	Nut Keps Hex 1/4-20 Unc
112	3645J	Bushing

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR- -MODEL NO. 15-107R (MBA15107RBA), PRODUCT 964 78 22-00
MOWER LIFT

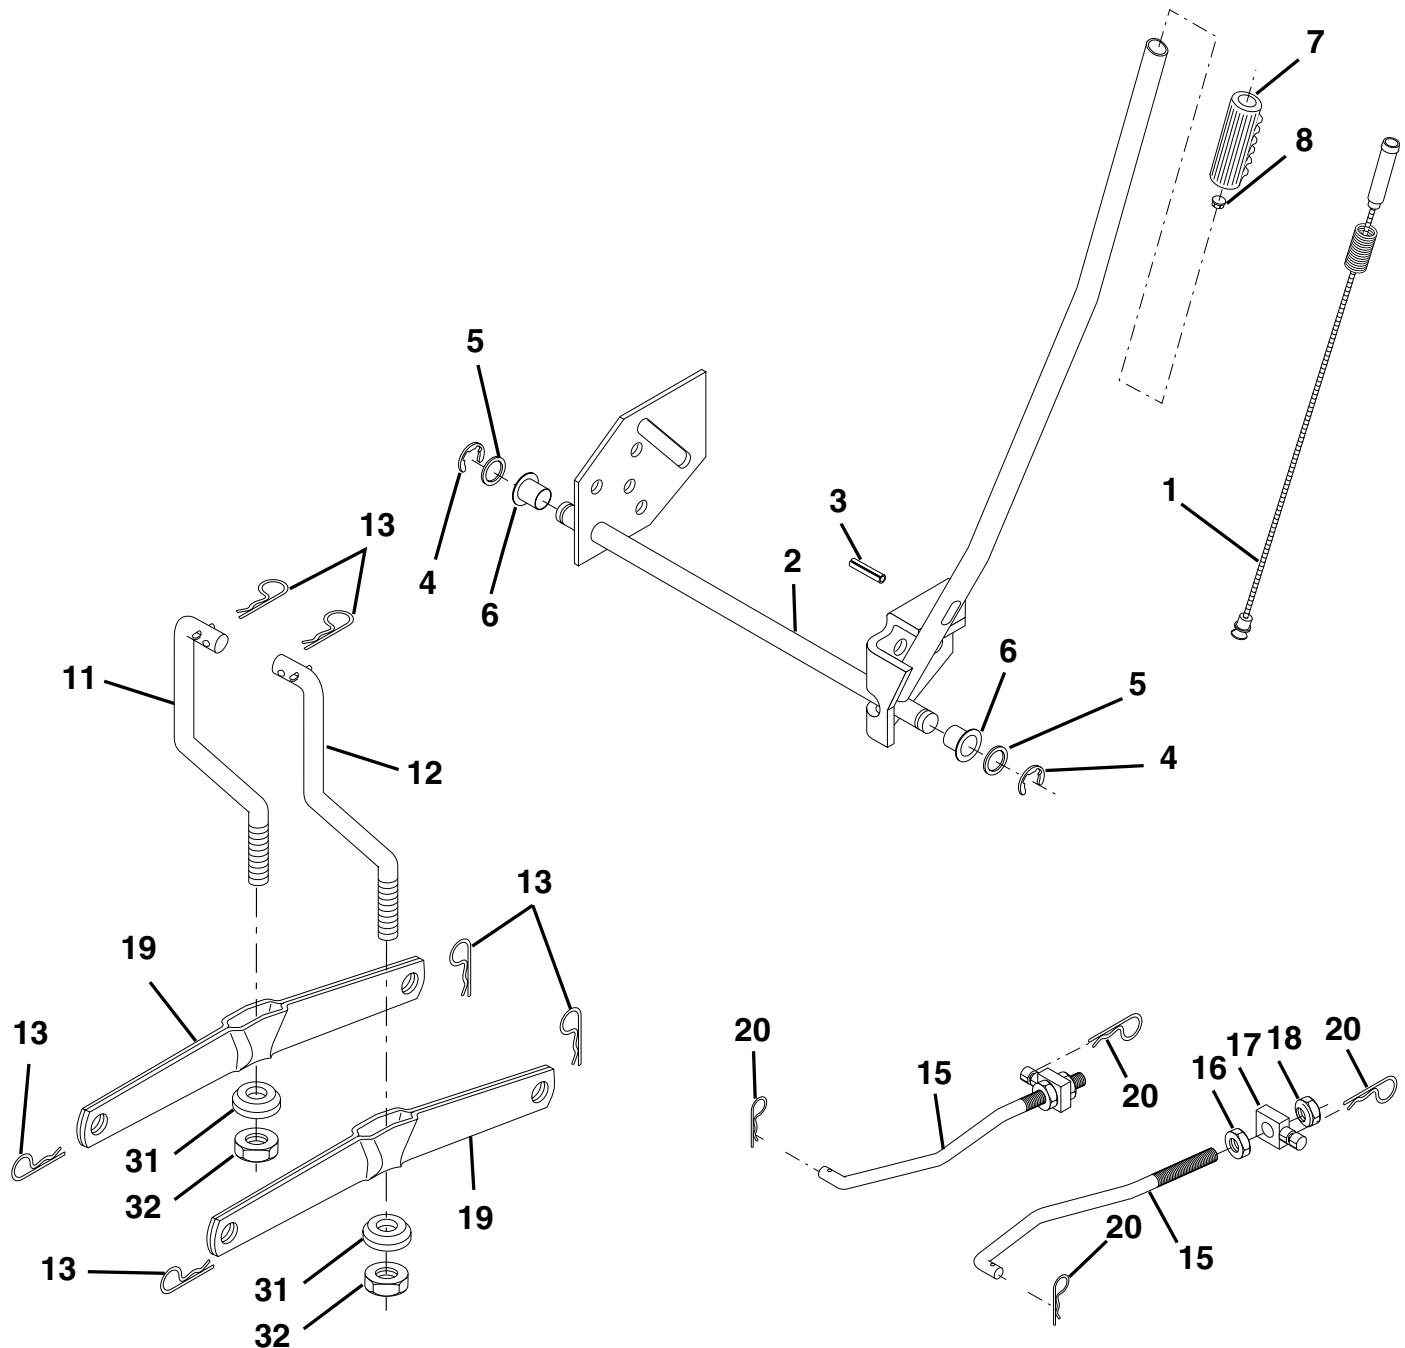

REPAIR PARTS


TRACTOR- -MODEL NO. 15-107R (MBA15107RBA), PRODUCT 964 78 22-00
MOWER LIFT

KEY NO.	PART NO.	DESCRIPTION
1	159460	Washer Asm Inner Spring W/Plunger
2	159471	Shaft Asm. Lift
3	105767X	Pin Groove
4	12000002	E Ring #5133-62
5	19211621	Washer 21/32 x 1 x 21 Ga.
6	120183X	Bearing Nylon
7	109413X	Grip Handle
8	124526X	Button Plunger Black
11	165829	Link Asm Lift L.H.
12	165831	Link Asm Lift R.H.
13	4939M	Retainer Spring
15	173288	Link Front
16	73350800	Nut Jam Hex 1/2-13 Unc
17	175689	Trunnion
18	73800800	Nut Lock w/Wsh 1/2-13 Unc
19	139868	Arm Suspension Mower
20	163552	Retainer Spring
31	169865	Bearing, Pvt. Lift.
32	73540600	Nut Crownlock 3/8-24

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR- -MODEL NO. 15-107R (MBA15107RBA), PRODUCT 964 78 22-00
MOWER

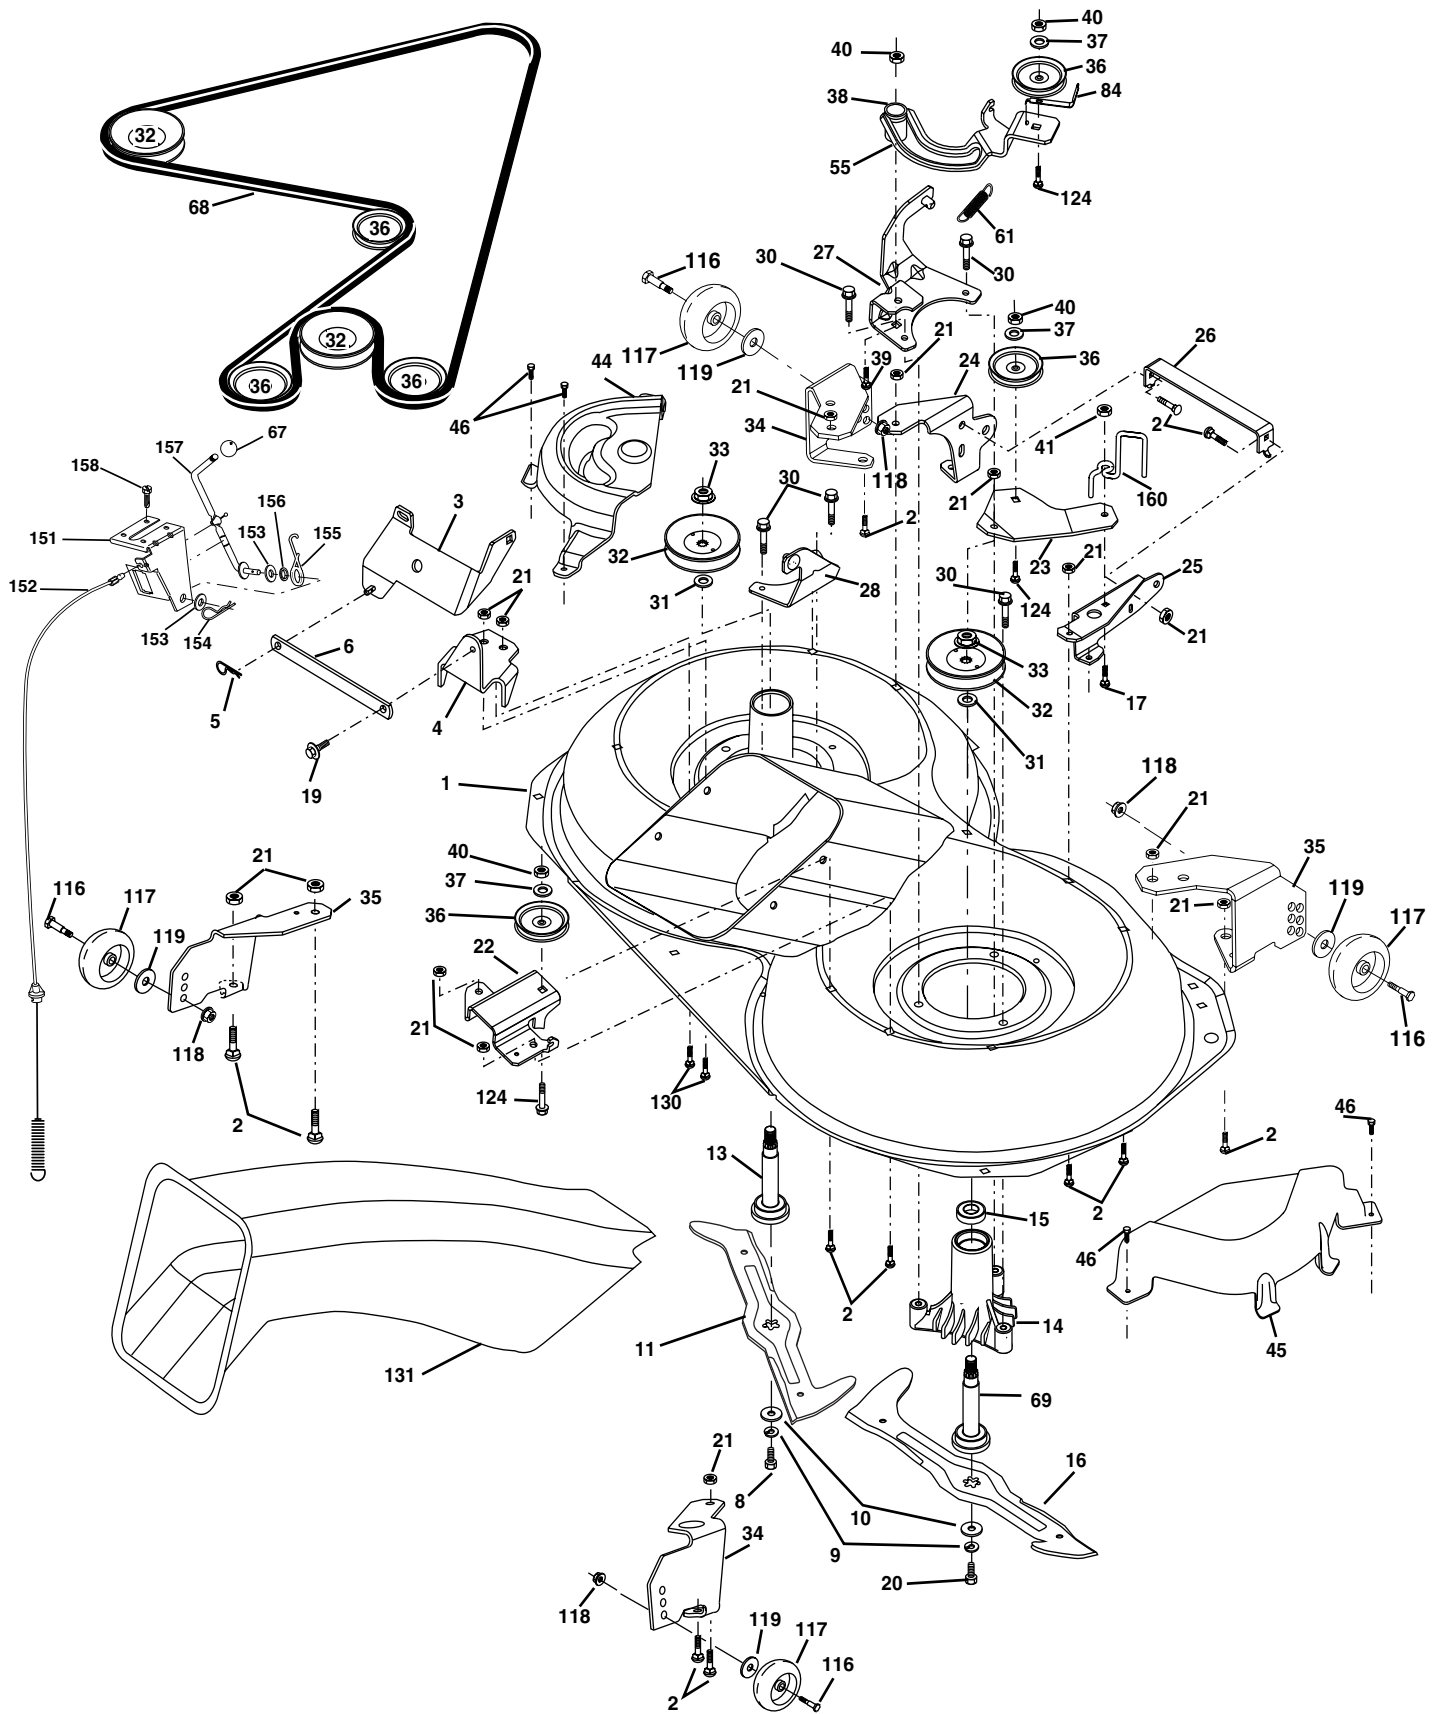

REPAIR PARTS

**TRACTOR- -MODEL NO. 15-107R (MBA15107RBA), PRODUCT 964 78 22-00
MOWER**


KEY NO.	PART NO.	DESCRIPTION
1	169160	Housing Asm. Mower
2	72140506	Bolt Rdhd Sqnk 5/16-18 Unc x 3/4
3	165569	Bracket Asm. S-Bar Chass
4	169167	Bracket Bar Sway Deck
5	4939M	Retainer Spring
6	165557	Bar Sway
8	850857	Bolt 3/8-24 x 1.25 Gr8 Patched
9	10030600	Washer Lock Hvy 3/8 Unplated
10	140296	Washer Hard Blade Mower vented
11	175450	Blade 3-1 Lh
13	137645	Shaft Asm. W/Lower Bearing
14	128774	Housing Mandrel Vented (Machd)
15	110485X	Bearing Ball Mandrel
16	175451	Blade 3-1 Rh
17	72140610	Bolt Carriage 3/8-16 x 1-1/4
19	132827	Bolt Shoulder 5/16-18 Thd Form
20	165484	Bolt 3/8-24 x 1.25 Gr8 Ptch Lhthd
21	73680500	Nut Crown Lock 5/16-18
22	169165	Bracket Idler RR
23	169166	Bracket Idler RF
24	169170	Bracket Suspension LF
25	169171	Bracket Suspension RF
26	165237	Brace Support Susp Frt CRD
27	169172	Bracket Asm. Susp RR
28	169168	Bracket Asm. Susp LR
30	173984	Screw Thd Rolling Dod Pt
31	129963	Washer Spacer Mower Vented
32	175707	Mandrel Pulleys
33	178342	Nut Flg Top Lock
34	179509	Bracket Gauge Wheel Lf
35	176292	Bracket Gauge Wheel Rf
36	146763	Pulley Idler V-Groove Dim 4.25
37	19131316	Washer 11/32 x 13/16 x 16 Ga
38	169851	Spacer Hub Arm Idler 107 CRD
39	72110622	Bolt Crownlock 3/8-16 Unc

KEY NO.	PART NO.	DESCRIPTION
40	73680600	Nut Crownlock 3/8-16 Unc
41	73900600	Nut Lock Flg 3/8-16 Unc
44	175538	Cover Mandrel Lh
45	175539	Cover Mandrel Rh
46	137729	Screw Thd Roll 1/4-20 x 5/8
55	169849	Arm Idler 107 CRD
61	175159	Spring Tension Belt
67	106932X	Knob Rd 3/8-16 Plstc Thds Blk
68	169178	Hex-Belt Mower
69	165482	Shaft Asm W/Lwr Brg Rh Thd CRD
84	156085	Keeper Belt Idler
116	137644	Bolt Shoulder
117	133957	Wheel Gage Donut Wide
118	73930600	Nut Centerlock 3/8-16 Unc
119	19121414	Washer 3/8 x 7/8 x 14 Ga.
124	72110612	Bolt Carr Sh 3/8-16 x 1-1/2 Gr5
130	72110506	Bolt Rdhdsqnk 5/16-18 Unc x 3/4
131	165661	Chute Bagger CRD
151	169670	Bracket Clutch Cable
152	176074	Cable Clutch CRD Service
153	169674	Washer Flat 3/8" Type B
154	169675	Spring Retainer
155	169671	Spring Retention Lvr Cltch Cab
156	169672	Spacer Clutch Cable
157	169669	Rod Clutch Cable 3/8"
158	17720410	Screw Hex Thd Cut 1/4-20 x 5/8
160	175160	Guide Belt CRD
--	130794	Mandrel Assembly (Includes Housing, Shaft and Shaft Hardware Only - Pulley Not Included)
--	165579	Mandrel Asm CRD Lh Threads SVC
--	180387	Replacement Mower Complete

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm

REPAIR PARTS

TRACTOR- -MODEL NO. 15-107R (MBA15107RBA), PRODUCT 964 78 22-00
BAGGER

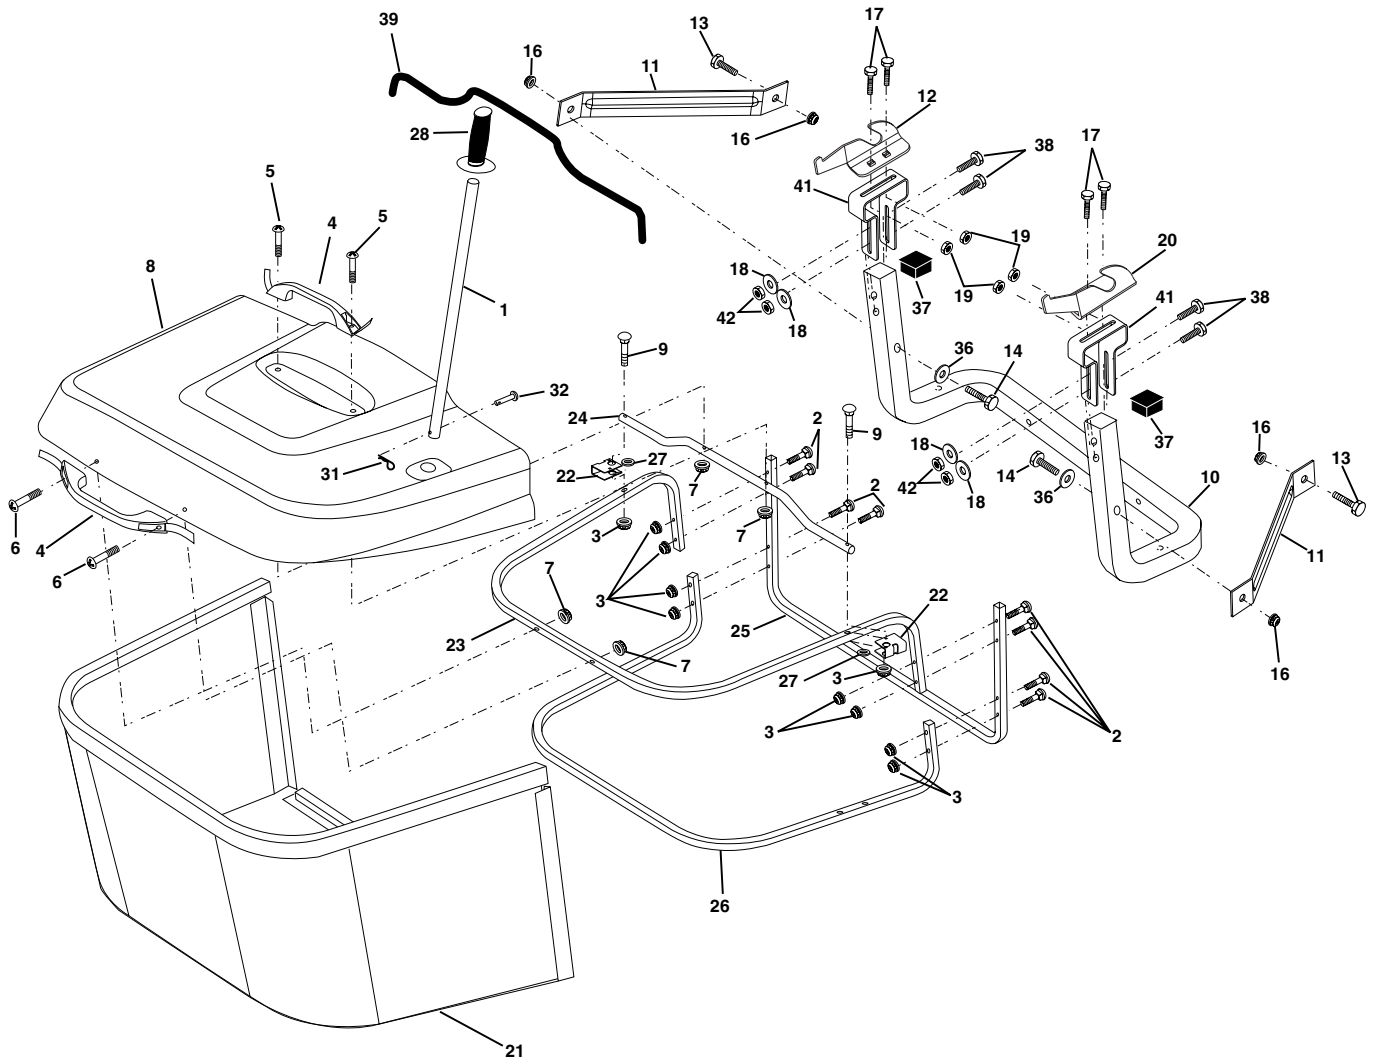

REPAIR PARTS

TRACTOR- -MODEL NO. 15-107R (MBA15107RBA), PRODUCT 964 78 22-00
BAGGER

KEY NO.	PART NO.	DESCRIPTION
1	165249	Tube Handle Bagger CRD
2	72140416	Bolt Carriage 1/4-20 x 2.0 Gr.5
3	123976X	Nut Lock 1/4 Lge Flg Gr. 5 Zinc
4	169916	Handle Bagger w/Lvrs Blk CRD
5	74981024	Screw Pan Head #10-24 x 1.50 Blk
6	74981032	Screw Pan Hd
7	73401000	Nut Wiz Lock Hex Serr/Hd 10-24
8	169963X558	Cover Bagger
9	72140418	Bolt Carriage 1/4-20 x 2.25d x Gr.5
10	181282	Tube Support Bagger CRD
11	165719	Bracket Support Upper Bag CRD
12	169685	Bracket Horizon Adj Bggr Lh CRD
13	72110606	Bolt Rdhd Sht Sqnk 3/8-16 x 3/4
14	72140620	Bolt Hex 3/8-16 x 2-1/2 Gr.5
16	73900600	Nut Lock Flg 3/8-16 Unc
17	72140506	Bolt Rdhd Sht Sqnk 5/16 -18 Unc x 3/4
18	19111216	Washer 11/32 x 3/4 x 16 Ga.
19	73900500	Nut Lock Hex Flange 5/16-18
20	169684	Bracket Horiz Adj Bggr RH CRD
21	180880	Bag Asm CRD
22	165781	Bracket Side Bagger CRD
23	165782	Tube Upper Bagger CRD
24	165783	Tube Pivot Bagger CRD
25	180124	Tube Front Bagger CRD
26	165785	Tube Lower Bagger CRD
27	169692	Bufshing Snap Bagger CRD
28	165787	Grip Handle Black
31	4497H	Retainer Spring 1" Zinc/Cad
32	126875X	Rivet Rd Hd Drilled 3/8 Dia
36	19132016	Washer 13/32 x 1-1/4 x 16 Ga.
37	175401	Plug Suport Bagger CRD
38	72010520	Bolt 5/16-18 x 2-1/2
39	180985	Seal 37"
41	169683	Bracket Vert Adj Bagger CRD
42	73800500	Nut Lock Hex W/Ins 5/16-18 Unc PI

NOTE: All component dimensions given in U.S. inches
1 inch = 25.4 mm



SERVICE POLICY WARRANTY



Issued January 1980
Revised January 1991

LIMITED WARRANTIES FOR NEW PEERLESS GEAR POWER TRAIN COMPONENTS

A. Products Warranted

Peerless Gear and Machine Division of Tecumseh Products Company ("Tecumseh"), subject to the limitations contained below, will, at its option, repair or replace, without charge for parts or labor only, any part of a new Power Train Component (which as used herein means and includes the transaxle, gear box, transmission, differential and right angle drives, and any part of the Power Train Component), EXCEPT any new Power Train Component incorporated in equipment used for commercial or rental purposes, which is found upon examination by any Tecumseh Authorized Service Outlet or by Tecumseh's factory in Grafton, Wisconsin, to be DEFECTIVE IN MATERIAL AND/OR WORKMANSHIP if received by Tecumseh or a Tecumseh Authorized Service Outlet for such examination within TWO YEARS from the date of sale to the original consumer purchaser of Peerless Series 820, 900, 910, 915, 920, 930 transaxles and Series 1100 angle drive and ONE YEAR for all other Peerless products. New Power Train Components incorporated in equipment used for commercial purposes are warranted in the same manner and to the same extent EXCEPT such Power Train Components are warranted for NINETY (90) DAYS ONLY, and must be received by Tecumseh or by a Tecumseh Authorized Service Outlet for such examination within 90 days from the date of sale to the original purchaser. New Power Train Components Incorporated in equipment used for rental purposes are warranted in the same manner and to the same extent EXCEPT such Power Train Components are warranted for THIRTY (30) DAYS ONLY, and must be received by Tecumseh or a Tecumseh Authorized Service Outlet within 30 days from the date of sale to the original purchaser.

B. Products And Items Not Warranted

1. Alterations or Modifications of Power Train Components.
2. Accidents, Normal Maintenance, Failure to follow the Original Equipment Manufacturer's Manual.

This warranty covers only parts of new Power Train Components which are found upon examination to be defective in material or workmanship as delivered to the original purchaser. This warranty does not cover defects caused by depreciation or damage caused by normal wear, accidents, improper maintenance, improper use or abuse of the product, failure to follow the instructions contained in an Instruction Manual for the operation of the Power Train Component and parts. The cost of normal maintenance and replacement of service items which are not defective shall be paid for by the original purchaser.

C. Securing Warranty Service

Warranty service can be arranged for by contacting either a Tecumseh Authorized Service Outlet (any Tecumseh Registered Service Dealer, Tecumseh Authorized Service Distributor, or Tecumseh Central Warehouse Distributor) or by contacting Tecumseh, c/o Service Manager, Engine and Transmission Group Service Division, 900 North Street, Grafton, Wisconsin 53024. Warranty service can only be performed by a Tecumseh Authorized Service Outlet or by Tecumseh at its factory in Grafton, Wisconsin. At the time of requesting warranty service, evidence must be presented of the date of sale to the original purchaser. The purchaser shall pay any charges for making service calls and/or for transporting the product to and from the place where the inspection and/or warranty work is performed. The purchaser shall be responsible for any damage or loss incurred in connection with the transportation of Power Train Components and/or part(s) of the Power Train Components submitted for inspection and/or warranty work.

D. Limitation of Damages and Implied Warranties

The foregoing EXPRESSED WARRANTY IS IN LIEU OF ALL OTHER EXPRESS WARRANTIES. Neither Tecumseh nor any of its affiliates makes any warranties, representations or promises, written or oral, as to the quality of the Power Train Component or any of its parts, other than as set forth herein.

ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE, TO THE EXTENT THAT EITHER MAY APPLY TO ANY PART(S) OF POWER TRAIN COMPONENTS, SHALL BE LIMITED IN DURATION TO THE PERIODS OF THE EXPRESSED WARRANTIES DEFINED IN PARAGRAPH A HEREOF. IN NO EVENT WILL TECUMSEH BE LIABLE FOR ANY INCIDENTAL, CONSEQUENTIAL OR SPECIAL DAMAGES AND/OR EXPENSES. Some states do not allow limitations on how long an implied warranty lasts or the exclusion or limitation of incidental or consequential damages, so the above limitation(s) or exclusion(s) may not apply to you. This warranty gives you specific legal rights and you may also have other legal rights which vary from state to state.

E. No Dealer Warranty

Tecumseh neither assumes nor authorizes any other person, natural or corporate, to assume for Tecumseh any other obligations or liabilities in connection with or with respect to any part(s) of a Power Train Component. The seller or dealer of part(s) of a Power Train Component has no authority, whatsoever, to make any representations or promises on behalf of Tecumseh or to modify the terms or limitations of Tecumseh's warranty in any way.

SERVICE NOTES

Mr. Bricolage